

## Plug gauge for HELICOIL® holding threads

according to NASM 33537 tolerance class 2B.

Plug gauge to check if holding threads for HELICOIL® thread inserts which have been produced with a threading tool are true to gauge.

For UNF threads. Complies with tolerance class 2B as per NASM33537.

Technical information can be found on the last page.



Diameter (d)	Article number	Pitch (P)	Nominal length t <sub>2</sub>
UNF 1/4"-28	01473747500	0.91	6.4
UNF 5/16"-24	01473767500	1.05	19.8
UNF 3/8"-24	01473777500	1.05	9.5
UNF 7/16"-20	01473787500	1.27	11.1
UNF 1/2"-20	01473797500	1.27	12.7
UNF 4-48	01473657500	0.53	7.1
UNF 6-40	01473677500	0.63	7.0
UNF 8-36	01473687500	0.71	4.2
UNF 10-32	01473697500	0.79	4.8

All technical data refer to the measure mm



## HELICOIL® Plus thread inserts





W and d<sub>1</sub> are the control values for thread inserts (Free Running and Screwlock) before they have been installed. The length can only be measured for installed thread inserts.

### Holding thread



### Assembly

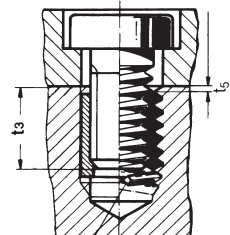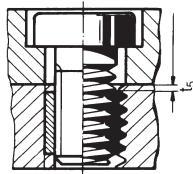

tang not broken off

Prior to tapping, counter-bore 90° and deburr.  
Outside diameter of countersink =  $D_{HC} + 0.1 \text{ mm}$ .

- d = Nominal thread diameter
- P = Thread pitch
- d<sub>1</sub> = Outside diameter of thread insert prior to installation
- W = Number of threads prior to installation
- D<sub>HC</sub> = Outside diameter of the parent thread
- D<sub>1HC</sub> = Crest diameter
- B = Suitable twist drill diameter. Please note: D<sub>1HC</sub> is critical for selecting the correct twist drill diameter.
- t<sub>1</sub> = Minimum depth of tapped hole according to DIN 76 – Part 1 (guide value)
- t<sub>2</sub> = The nominal length of the thread insert corresponds to the minimum length of the full parent thread for blind holes or the minimum plate thickness for a through hole.
- t<sub>3</sub> = Maximum screw-in depth when the tang is not removed
- t<sub>5</sub> = Distance of the thread insert from the joint face = 0.25 to 0.5 P, if t<sub>2</sub> corresponds to the above-mentioned minimum value

When you use HELICOIL® Plus thread inserts for volume production, we recommend to add at least 1 x P to values t<sub>1</sub> and t<sub>2</sub>.

All technical data refer to the measure mm

